


# Lecteur code barre MS3580


Please scan the codes in the numbered order.

1. Enter Program Mode

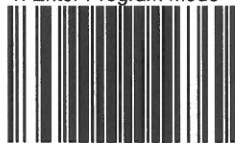

999999

6. Configuration Code 4

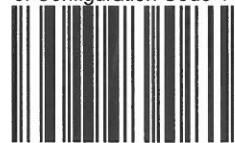

816680

2. Internal Low Speed USB Defaults




999941

7. Configuration Code 5




818440

3. Configuration Code 1

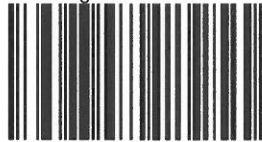


80351550

8. Exit Program Mode

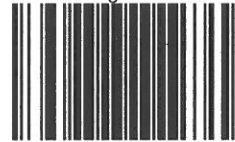


999999

4. Configuration Code 2

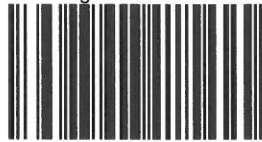

81601520

5. Configuration Code 3

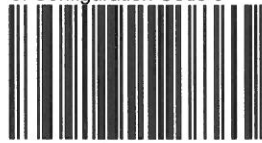

8162340